MUJI

- Thank you for your purchase.
- In order to use this product properly, please first read this User's Manual before use.
- Please keep this User's Manual in a handy location for future reference.

Stand for Wall Clock and Wall-Mounted CD Player

Retain for future reference **User's Manual**

Before You Start

· You'll need a Phillips head screwdriver (No. 2) to assemble this product.

Parts List

Body 	For Wall Clock Installation Screw x 1 (M4(ISO) x 25mm) For Wall-Mounted CD Player Installation Screws x 4 (M4(ISO) x 15mm) 

Caution

· This product is designed for use with MUJI's Wall Clock (with mounting holes) or Wall-Mounted CD Player with the product number of CPD-2, CPD-3 or CPD-4. Do not attempt to use this product to mount any other products.

· To avoid damage or injury, do not use at one end of a table, on top of a set of drawers, or in any other unstable location.

· Follow each individual product's User's Manual regarding usage and installation locations.

· Do not install screws in the opposite direction to that indicated above. Your wall clock or wall-mounted CD player may fall, causing injury or property damage.

Parts/Usage

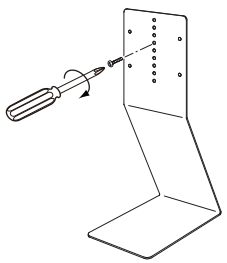

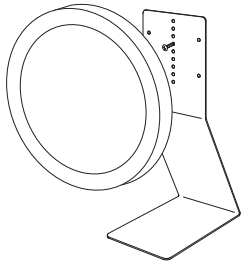

◎ Installing Wall Clock

Select one of the nine center holes (depending on the size of the clock and desired installation position). Using a Phillips head screw driver, screw in the installation screw part-way, and hang the clock.

Note

· Follow the Wall Clock's User's Manual regarding the depth for screwing in the installation screw.
· See the Wall Clock's User's Manual for instructions on mounting the clock.
· The four outlying holes are for mounting a wall-mounted CD player. Do not use these holes for mounting the wall clock.

◎ Wall-Mounted CD Player

Use a Phillips head screw driver to attach the wall-mounted plate (Wall-Mounted CD Player accessory) to the stand using the four installation screws in the four outer holes. Next, affix the CD player to the wall-mounted plate. See the Wall-Mounted CD Player's User's Manual for installation and usage instructions.